

MEGA DRY

CS75 Wi-Fi Dehumidifier

LCD Touch Screen & Wi-Fi Control


Please Leave This Manual With The Homeowner

Date of Installation: _____ Installed by: _____ Installer Phone: _____

Place Serial Number Sticker Here:

- Installation by anyone other than a qualified contractor voids the warranty.
- Product designed for residential installation only. Commercial installation voids warranty.
- Modification or alteration of product, parts, installation instructions or local safety codes voids warranty.
 - Read our full warranty policy at the end of this document.

Ideal for Whole-House; Crawl Space Attic or Basement

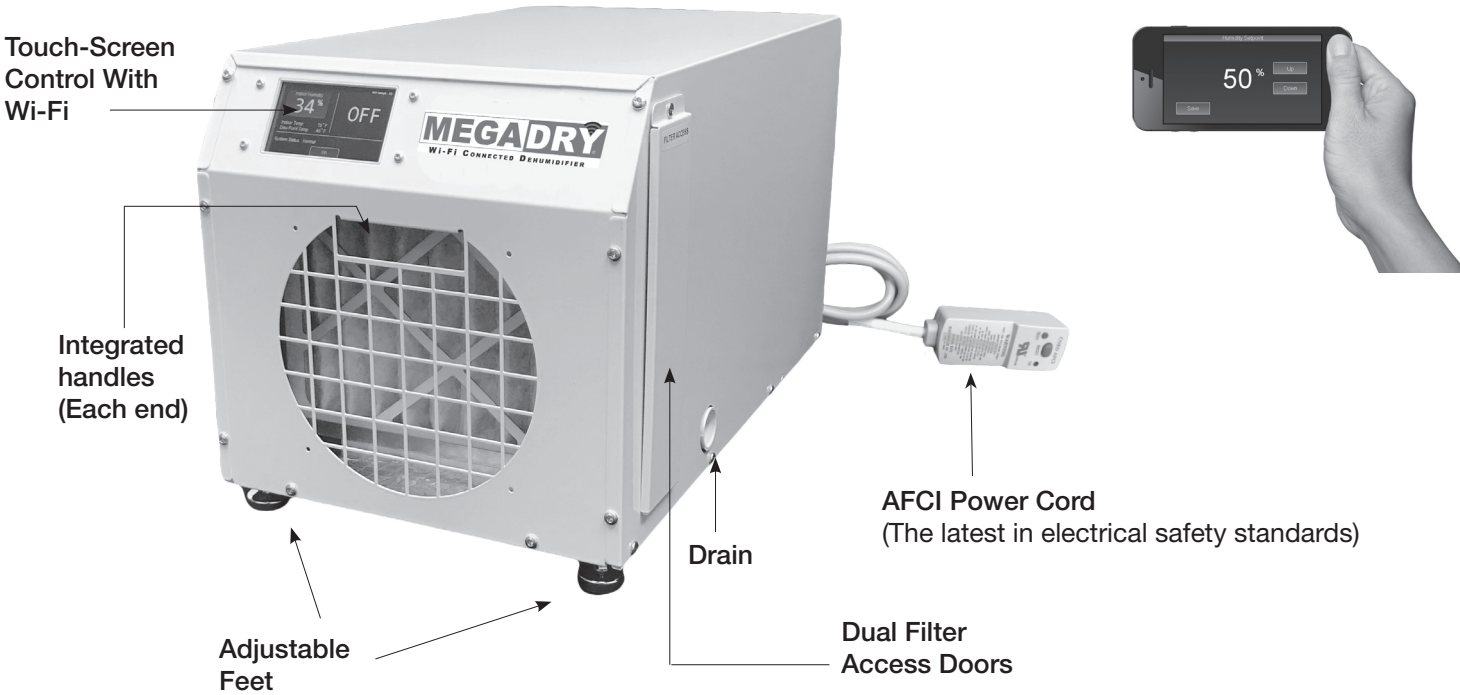

Designed & Assembled in the USA

PURE MICHIGAN

Crawl Space Depot
(888) 331-9991
Two Locations:

2115 Frank Bird Blvd.
Rockford, TN 37853

420 Prescott Street
Greensboro, NC 27401

Warranty/Product Support
General Filters, Inc.
(866) 476-5101



CS75 Table of Contents

Specifications	3
Unit Location	3
Electrical Requirements	4
Condensate Removal	4
Ducting (See Duct Connection Diagram, Page 7)	4
Wiring Unit Schematic	6
Field Connections, Low Voltage	7
Typical Equipment Layout Specification & Duct Connection Diagram	7
Wi-Fi Operation	7
Typical System Operation Sequence	8
Coil Freeze Protection (Auto Defrost)	8
Compressor Protection	8
Maintenance	8
Specifications	9
Owners Manual	9
Your New Purchase	10
How Your Dehumidifier Works	10
Maintenance	10
Downloading the GeneralAire® Wi-Fi APP	11
Using the GeneralAire® Wi-Fi APP (or Touch Screen) Control	11
Dehumidifier Settings & Controls	12
Limited Warranty	13
Limited Warranty	14
Warranty Registration & Product Support	14



WARNING!

This symbol indicates: **IMPORTANT INSTRUCTIONS!**
Failure to heed them can result in serious injury or death.



CAUTION!

This symbol indicates: **IMPORTANT INSTRUCTIONS!**
Failure to heed them can result in serious injury or material property damage.

Specifications

	CS75
Capacity	Up To 75 Pints Per 24 Hours @ 80°F / 27° C - 60% RH
Control	LCD Touch Screen Display With Wi-Fi
Power Supply	115VAC, 60Hz
Air Flow	180 CFM
Inlet Air Operating Temperature	50°F - 90°F / 10°C - 32°C
Filter	MERV 11 Pleated Filter GFI #7143 10" X 12" X 1"
Duct Connections	8" Diameter (Inlet & Outlet)
Weight	58 Lbs.
Dimensions	12.75" H x 12.6" W x 21" L



Tested to ANSI/UL STD 474, and to Canadian CSA Std C22.2 No. 92-197 and applicable sections of ANSI/UL STD 1995.



Unit Location

The CS75 dehumidifiers can be installed in a variety of locations to meet the owner's needs as listed below. In all cases keep the following cautions in mind:

- CAUTION:** The unit is designed to be installed indoors in a space that is protected from rain, flooding and/or other forms of excess water. Unit is not designed to be exposed to chlorinated pool conditions or spaces where unit will be exposed to corrosive chemicals or conditions.

 - Install the unit with ample space as to access the filter cover panel for service and maintenance.
 - Avoid discharging the air directly at people, or other areas or objects where dehydration or evaporation of moisture is not desired.
- WARNING:** If used near wet areas, be certain there is NO chance the unit could fall into the water or be splashed and that it is wired into a **GROUND FAULT INTERRUPTER** protected circuit (see local codes for other requirements).
- CAUTION:** A secondary drain pan **MUST** be placed under the unit if installed above a living area or above an area where water leakage could cause damage (see local codes for other requirements).

 - **DO NOT** locate the CS75 directly on structural members where noise or vibration may be objectionable. The CS75 is equipped with adjustable support feet to raise and level the unit from the mounting surface. Ensure unit is installed level using the included bullseye level.
 - In a whole house system, the CS75 should be located near the existing air handling system to minimize the duct work required for connection.
 - When the remote control option is used, the control (dehumidistat) unit must be located in the space that is to be conditioned. The control (dehumidistat) may be low voltage (24 volt) and should be connected to the CS75 with code approved, low voltage thermostat cable.
 - **If a remote dehumidistat is utilized, change the setting for "Remote Humidistat Installed" on the control panel to "Yes".**
 - When locating the CS75 in areas of extreme heat or high humidity, >120°F/90% humidity, additional external insulation may be required to prevent undesired condensation on the exterior of the unit.

⚠️ Electrical Requirements

⚠️ **WARNING:** Disconnect power before installation and / or servicing, as electric shock may occur and cause serious injury or death.

⚠️ **WARNING:** The CS75 is equipped with an AFCI power cord with ground prong and may be plugged directly into a grounded 3 prong, 120 volt, 15 amp household type convenience outlet. If used in a wet area such as an area prone to flooding (basement or crawl space), **a ground fault interrupter protected circuit is required.** In all cases local codes precede over all installation and wiring recommendations.

- **Do not remove ground prong. Do not use an adaptor. Do not use an extension cord.**
- If a remote wall mounted dehumidistat is used, install the dehumidistat control in a central area of the structure where it will sense the relative humidity of the structure accurately. Do not install the control where it may not accurately sense the relative humidity: near HVAC supply registers, or near exterior doors. Do not install the control in an area not served by the CS75. The installer must supply the wiring between the CS75 and the dehumidistat control. Be sure to safely route the control wiring to prevent damage during installation. Be careful not to cross the wires when connecting the CS75 and the control or damage to the transformer may result.
- **When a remote dehumidistat is utilized, set the unit mounted dehumidistat to the “OFF” position.**
- Consult the electrical schematic (Page 6 in this manual).

Condensate Removal

- Condensate drains by gravity via the 3/4" PVC drain outlet located on the side of the unit. The unit must be installed level, or slightly tilted toward the drain outlet side.
- Use included hard drain trap when possible. Proper sloping of drain line is required - 1/4" per 12").

⚠️ **CAUTION:** All PVC connections are press fit only. In some situations sealer can be used, but do NOT use glue.
• Do not use drain tubes to lift or move unit.

⚠️ **CAUTION: Avoid double trapping.** Where flexible tubing is used, possibilities of sags occurring in the drain line exist, or the drain terminates in a sump below the waterline, the drain must be vented to allow proper draining. A condensate drain vent must be installed at the outlet side of the drain trap, between the trap and the balance of drain line.

- An optional condensate pump kit may be installed if a lift is required to dispose of the condensate.
- **If an optional pump is used, the condensate trap is still necessary and must be installed between the unit and pump.**
- When the condensate drain is located in, or passes through, a non-conditioned space, **the condensate piping should be insulated to prevent the drain line from sweating.**



Ducting (See Duct Connection Diagram, Page 7)

A. Installing Duct

Available for the CS75 is an optional an 8" round duct collar inlet, and an 8" round exhaust/supply collar that provides for connecting to the supply distribution system. In all cases, sound duct design practices must be followed such as those provided in ACCA manual "D", or ASHRAE's "Fundamentals of Air System Design".

B. Ducting for Dehumidification (Example of typical ducting on page 7)

For the ideal installation, draw air from the central part of the home and return it to the isolated areas of the home like the bedrooms, den, utility room, or family room. The duct work of the existing HVAC system can be used to supply air to the home. If the existing supply duct adequately serves all areas of the home, discharge the supply air of the CS75 into the return of the existing HVAC system where it can be distributed throughout the space. The existing return duct, if adequate, may be used as return for the CS75. **DO NOT** draw air directly from the kitchen, laundry, bathroom, or isolated basement. Air may be drawn from a basement that is open to the home. All flexible ducting connected to the CS75 should be approved by local codes and in most cases insulated.

- Return air ducts should be designed to allow unimpeded air flow to the return side of the system. For returns less than 10' in length, an 8" round or equal may be utilized. Multiple returns are acceptable.
- The supply air outlet and the return air inlet are located on each end of the CS75. A length of acoustical flex ducting on the outlet of the CS75 will reduce air noise. A length of flexible ducting on all CS75 duct connections is recommended to reduce noise and vibration transmitted to rigid duct work in the structure.
- Ducting the CS75 as mentioned in the "Ducting" sections requires consideration of the following points:
 - **Duct Sizing:** For total duct lengths up to 10', use a minimum 8" diameter round or equivalent rectangular. For longer lengths, up to 25', use a minimum 10" diameter or equivalent duct size. Grills or diffusers utilized must not excessively restrict airflow.
 - **Isolated Areas:** Effective dehumidification may require that ducting be branched to isolated, stagnant areas. Use 8" or larger diameter branch ducting to each of two or three areas, use 6" or larger to each of four or more areas.
 - **Connecting to Existing HVAC Systems:** For proper operation, connecting to existing air handler and duct systems requires the fans of each system to be interlocked using the low voltage interlock method provided in the CS75 low voltage connection diagram. Refer to low voltage connection diagram in this document and on the unit.

C. Installation in Basement or Crawl Space with Existing Forced-Air HVAC System (WH)

If the structure in which the CS75 system is to be installed has an existing forced-air HVAC system, and this system serves the areas that are desired to be controlled, use the HVAC system to make the CS75 installation easier and provide better whole house type system performance.

Basement or Crawl Space Installation: Install a separate 8" return for the CS75 in a central area of the structure or if the return ducting is adequate tap into the existing return duct system near the return air grill. Duct the supply of the CS75 System to the return ducting of the existing HVAC system. The fan interlock provision must be utilized for proper system performance.

D. Installation in Attic with an Existing Forced-Air HVAC System (WH)

IMPORTANT: A secondary drain pan **MUST** be installed with a drain or float interrupt for condensation under the CS75 in an attic to prevent condensate overflow that may drip down, damaging the ceiling or living space below.

Install a separate 8" return for the CS75 in a central area of the structure or if the return ducting is adequate tap into the existing return duct system near the return air grill. Duct the supply of the CS75 System to the return ducting of the existing HVAC system. The fan interlock provision must be utilized for proper system performance.

E. Installation in Structure with Two Forced-Air HVAC Systems (WH)

Attach the CS75 return to an independent return from the upper level. Attach the CS75 supply to the return of the basement HVAC system. This will promote circulation of air through the whole structure from the upper level to the lower level through the CS75. If the CS75 is not connected to both HVAC systems, it may not control the humidity of the entire structure. The fan interlock provision should be connected to the lower ducted HVAC system and must be utilized for proper system performance.

- **WH = Whole House Dehumidification**
- **SP = Spot Dehumidification**


F. Installation in Structure with No Existing Forced-Air HVAC System (WH)

When installing the dehumidifier in a structure that does not have a forced-air HVAC system, a single return for the dehumidifier should be installed in central open area of the structure. **DO NOT** locate the return in a bathroom or a kitchen. The supply of the dehumidifier should be located in the remote areas of the structure (such as bedrooms, den, etc.). By ducting this way, the air inside the structure will circulate through the dehumidifier to be filtered and dehumidified. 5" diameter duct is recommended for branches to the bedrooms, 6" diameter duct is recommended for branches to larger areas.

G. Installation in Sealed Crawl Space or Sealed Attic (SP)

When installing the dehumidifier in sealed crawl space or sealed attic, a single return for the dehumidifier should be installed in central open area of the structure. If the area is open without partitions return ducting is not necessary. Supply ducting is recommended to enhance the performance of the system. A minimum length of supply duct, 3' to 6', will aid in air distribution. If the area(s) being served are divided by walls or partitions, a supply and return duct system is recommended. In all cases sound duct design practices must be followed such as those provided in ACCA manual "D", or ASHRAE's "Fundamentals of Air System Design".

Wiring Unit Schematic

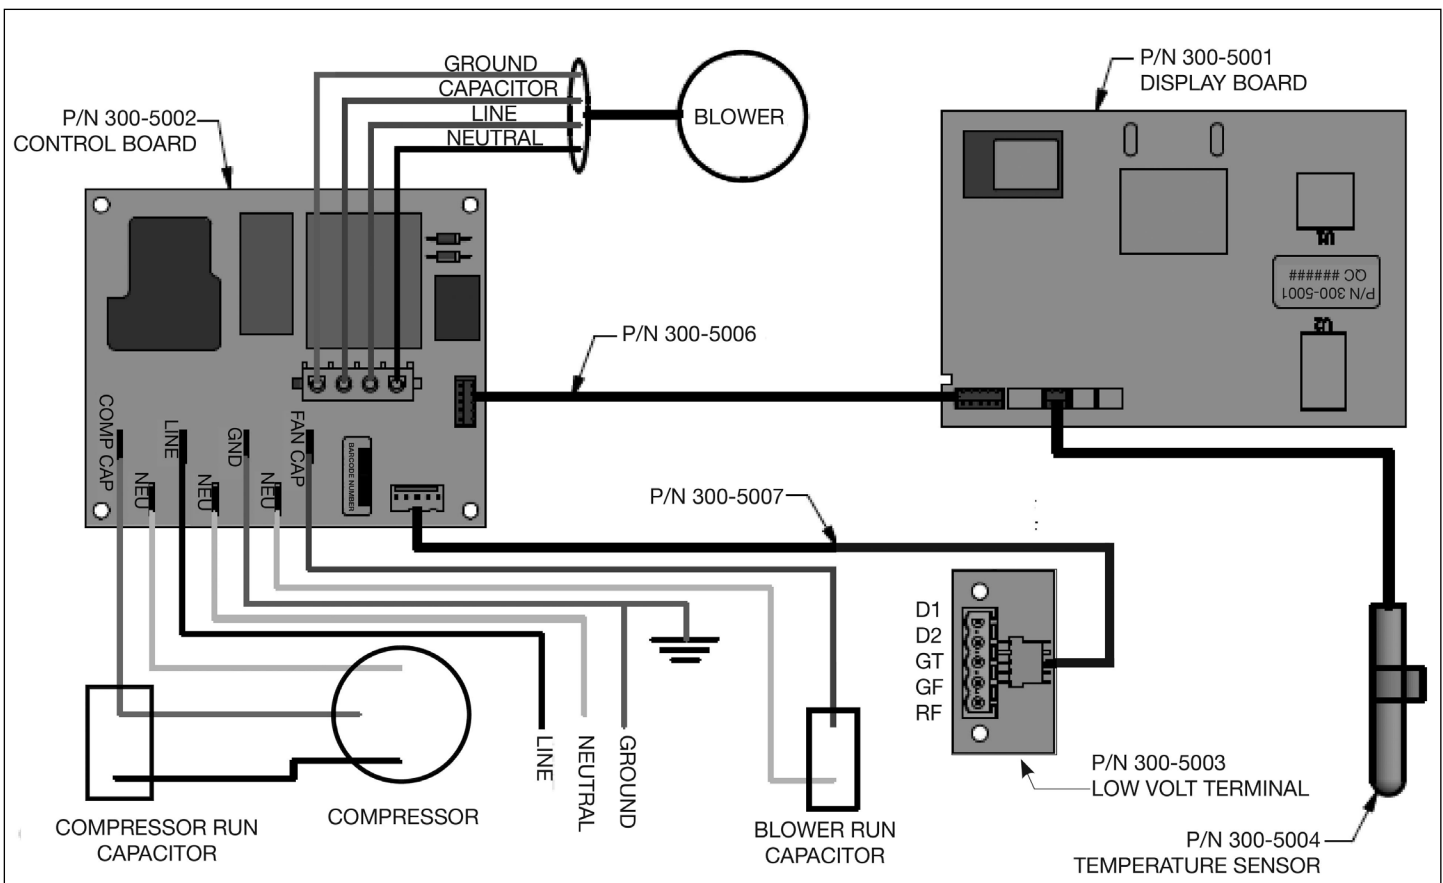


- WH = Whole House Dehumidification
- SP = Spot Dehumidification


- Low voltage adapter is included with your unit for installation of a remote dehumidistat.

Field Connections, Low Voltage

When a remote dehumidistat is used, set the unit mounted dehumidistat to the “OFF” position.

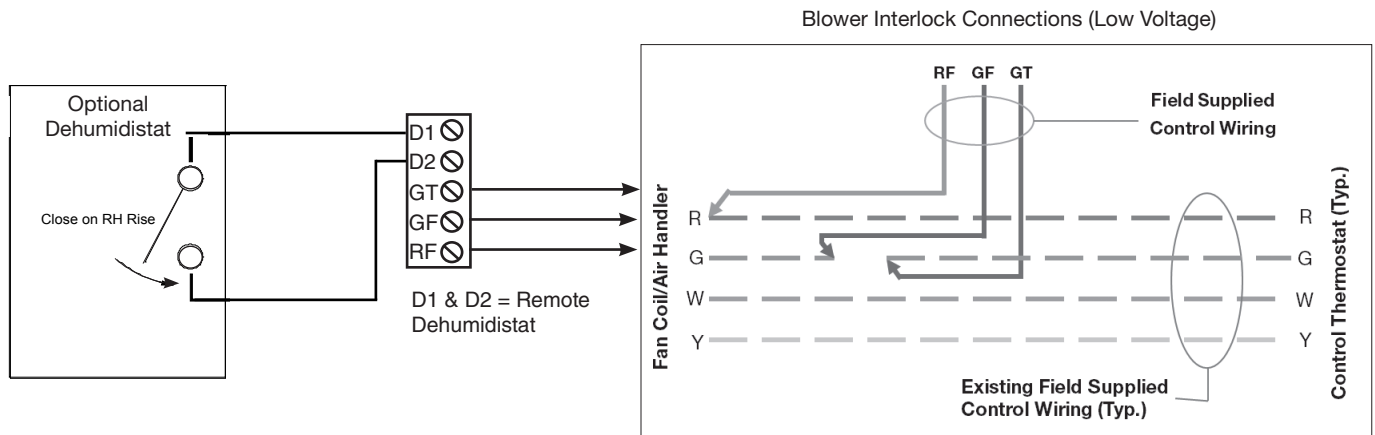

Typical Equipment Layout Specification & Duct Connection Diagram

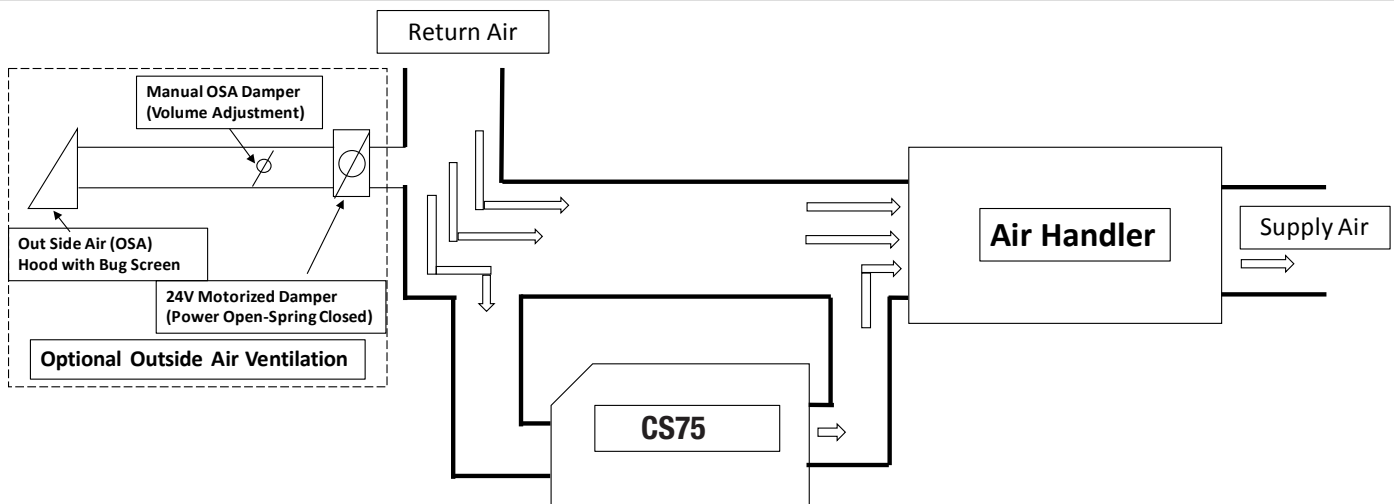

Wi-Fi Operation

The CS75 is designed to deliver dehumidified, filtered air to a living space. It is equipped with an onboard touch-screen control with Wi-Fi capability, allowing you to check the status of your unit and adjust settings from almost anywhere. See the owner's manual for instructions on how to download and use the GeneralAire® Wi-Fi APP.

Research shows that a relative humidity level of 40% to 60% is ideal indoors; however, other factors may dictate a relative humidity level different than the recommended (examples: the presence of musical instruments, antiques or artwork; remodeling projects; extensive woodwork; personal preference). Winter minimum humidity levels of 30-35% may not be attainable without supplemental humidification (humidifier), and may not be desired during times of low outdoor temperatures.

System Variations:

The system may be installed as a free standing unit, or incorporated with a home's heating / cooling / HVAC system.

Unit Humidity Control - Standard

Change the humidity set point on the CS75 on either the unit itself or using the mobile APP on your smart device. See the owner's manual for further instruction.

Typical System Operation Sequence

When the relative humidity exceeds the dehumidistat set point, the dehumidistat will energize the dehumidification and air circulation components of the CS75 (note the time delay on some electronic dehumidistats). If the CS75 system is connected and interlocked with an existing heating/air conditioning system, the system circulation fan will also be energized. The CS75 will continue to operate until the humidity level is reduced to the set point selected on the dehumidistat and then will cycle off. During this cycle, the air circulated through the CS75 system will be filtered and dehumidified.

Coil Freeze Protection (Auto Defrost)

The dehumidification coil (evaporator) is equipped with a low temperature freeze thermostat. If the coil temperature is reduced to the point of ice buildup, the thermostat will open the compressor control circuit while allowing the fan to continue running. Once the coil has returned to normal conditions, the control will close and allow the compressor to re-start. The prevailing conditions of the return air (temperature and humidity) will determine the length of this cycle.

Compressor Protection

The dehumidifier control module is equipped with a delay timer function to prevent compressor short cycling and enhance product performance. The control module delay timer (approximately 5 minutes) allows for adequate off time to ensure the pressures equalize before the next start.

Maintenance

High Efficiency Air Filter - Replace Every 6 Months

The CS75 includes a MERV 11 pleated filter that captures as much as 80% of particles 1.0 to 3.0 microns in size. The filter's function is to keep your dehumidifier running clean and efficient (whether incorporated into your HVAC system or installed as a stand alone unit). The MERV 11 air filter is NOT designed to replace your current whole house air cleaner/ filter installed within your HVAC system.

Operating the unit with a dirty filter will reduce dehumidifier capacity and efficiency, may cause the compressor to cycle off and on unnecessarily, and may clog the heat exchange coils. Under normal operating conditions, the filter will last approximately 3 to 6 months. However, in high particulate concentrations more frequent replacements may be required.

It is recommended that the filter be inspected regularly for the first three to four months to determine the loading and correct replacement intervals. Your installation contractor should be contacted for assistance. **Replace your filter every 6 months, or as often as required to keep the unit clean and maintain your warranty. When using as a stand-alone dehumidifier in an enclosed crawlspace, reduced runtimes in the colder season may allow for filter life of up to one year.**

To access the air filter, remove the filter access panel from the front or back side of the unit, marked "Filter Access". The filter should be readily visible and can be removed by pulling it straight out of the unit. Ensure arrows indicating air flow direction are pointed towards the unit. Replacement filters can be purchased from your installing contractor or ordered from the factory if a local wholesaler is not available.



CAUTION: DO NOT operate the unit without the filter, or with a less effective filter than originally supplied. **FAILURE TO MAINTAIN SERVICE AND UTILIZE CLEAN FILTERS WILL VOID WARRANTY.**

Oiling & Lubrication

The fan motor is factory lubricated and sealed, and no further oiling is required. There are no other components requiring the addition of lubricants.

MEGA DRY

Dehumidifier Owner's Manual


CS75 Wi-Fi Dehumidifier

LCD Touch Screen & Wi-Fi Control

Please Leave This Manual With The Homeowner

Date of Installation: _____ Installed by: _____ Installer Phone: _____

Place Serial Number Sticker Here:

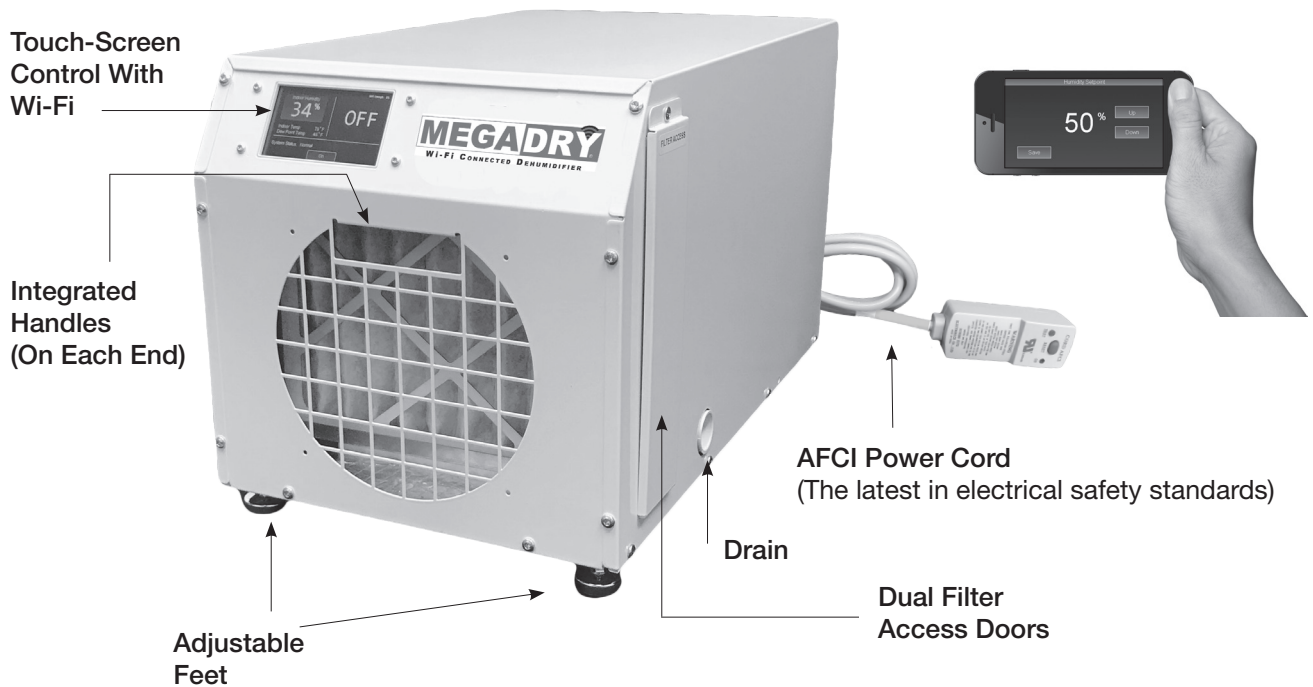

Specifications



Designed & Assembled
in the USA

PURE MICHIGAN

	CS75
Capacity	Up To 75 Pints Per 24 Hours @ 80°F / 27° C - 60% RH
Control	LCD Touch Screen Display With Wi-Fi
Power Supply	115VAC, 60Hz
Air Flow	180 CFM
Inlet Air Operating Temperature	50°F - 90°F / 10°C - 32°C
Filter	MERV 11 Pleated Filter GFI #7143 10" X 12" X 1"
Duct Connections	8" Diameter (Inlet & Outlet)
Weight	58 Lbs.
Dimensions	12.75" H x 12.6" W x 21" L

Tested to ANSI/UL STD 474, and to
Canadian CSA Std C22.2 No. 92-197 and
applicable sections of ANSI/UL STD 1995.



Crawl Space Depot
(888) 331-9991
Two Locations: 2115 Frank Bird Blvd. Rockford, TN 37853
420 Prescott Street Greensboro, NC 27401

Warranty/Product Support
General Filters, Inc.
(866) 476-5101



Your New Purchase

Thank you for your purchase of a MEGA DRY residential, whole house CS75 dehumidifier. We appreciate your business. You have taken an important step in controlling indoor air quality to ensure you and your family's comfort and health.

This unit is designed to be a stand-alone unit for areas such as crawlspaces or basements. It may also be used in whole-house dehumidifier applications. This owner's manual will cover both uses.

ABOUT THE MANUFACTURER:

Established in 1937, General Filters, Inc. manufactures the finest indoor air quality products you can count on to improve the air quality inside your home. Prior to leaving our facility, your unit has been tested to ensure proper performance.

IMPORTANT:

Your unit is warranted for a period of **FIVE YEARS** from date of installation. To maintain optimal performance throughout the life of your unit, be sure to perform the recommended maintenance.

How Your Dehumidifier Works

Your MEGA DRY dehumidifier controls humidity levels throughout your entire home (when used in whole-house applications). The unit continually monitors humidity levels in the air, and will automatically operate to remove excess moisture when levels are higher than your setting selection. A powerful motor inside the dehumidifier draws air into the unit, filters the air, and removes moisture. When air passes through the unit, it flows over cooling coils that pull moisture from the air by lowering the temperature. Excess moisture / condensation from the coils exit into the drain pan and down the drain.

Your dehumidifier also comes with the latest UL 474 Standard for dehumidifier safety: a factory-installed AFCI power cord. The AFCI power cord has been designed to supplement the protection of the GFCI's and common circuit breakers. By detecting hazardous arc-faults and responding by interrupting power, the AFCI helps reduce the likelihood of the home's electrical system being an ignition source of a fire.

Maintenance



Filter Access Door

⚠ IMPORTANT: Turn the power to the unit OFF before performing maintenance.

The CS75 dehumidifier comes with a MERV 11 pleated filter that protects internal components from particulates and other elements.

⚠ IMPORTANT: This filter must be changed at 6-month intervals. If your dehumidifier is installed in a crawlspace, you may need to change the filter more often (or less often depending on run times).

⚠ **DO NOT OPERATE THE DEHUMIDIFIER WITHOUT A FILTER.**

Replacement
Filter for CS75



Connecting Your Dehumidifier to the GeneralAire® Wi-Fi APP

(Optional: not required to run the unit)

1. First, connect your CS75 to the available Wi-Fi. The CS75 is compatible with 2.4 GHz Wi-Fi band.




2. Enter the Wi-Fi Password.
Note: as with any Wi-Fi device, performance can be influenced by signal speed and strength.

3. Once connected, download the "**GeneralAire® Wi-Fi APP**" found in your phone's APP Store or Google Play. Enter your dehumidifier's PIN number to log in.

4. To find your PIN: Select "Settings", "Mobile APP Pin", "Your Pin". After entering the 6-digit PIN, you will receive a "successful connection" message. (The "Refresh" button can be used to generate a new 6-digit pin should you experience Wi-Fi connection issues.)

You are now able to control your dehumidifier using your smart device control panel.

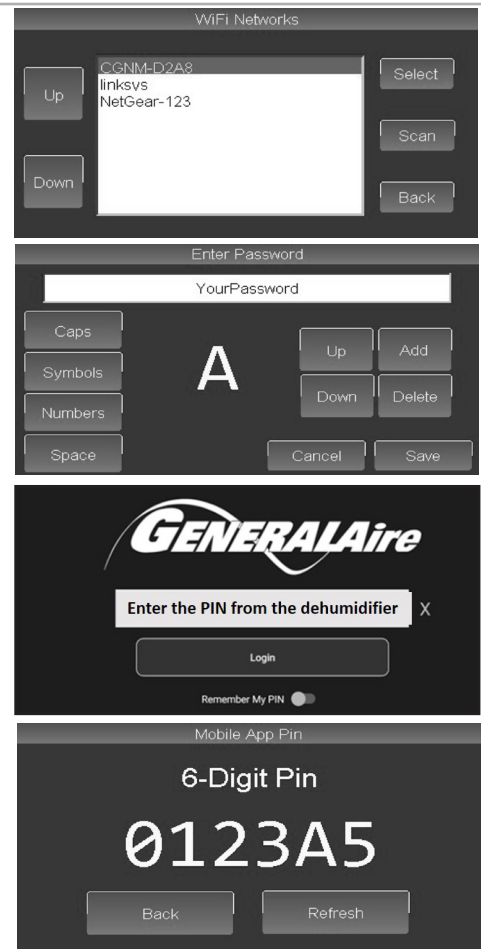


Using the GeneralAire® Wi-Fi APP or Touch Screen Control

1. On the dehumidifier touch screen or your APP, turn your dehumidifier on by simply pressing "ON".

2. The dehumidifier will take a moment to sample the air for current temperature and humidity measurements.

3. After the dehumidifier has finished sampling the air, its screen will display the current status of temperature, humidity and humidity setpoint in the space.

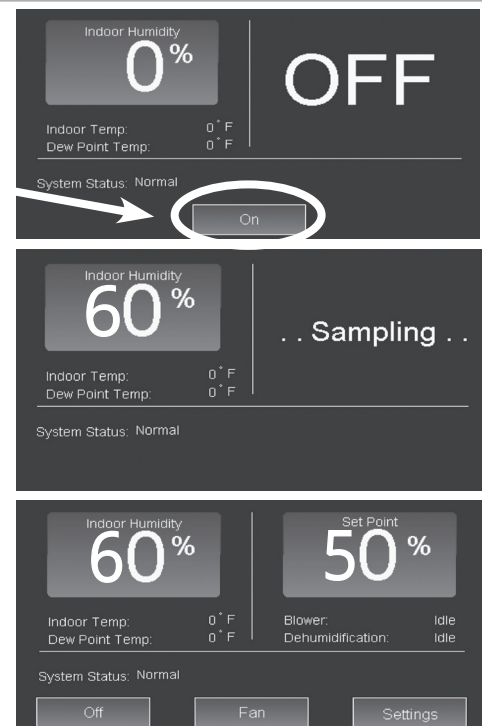

Dehumidifier Settings & Controls

4. You will need to select the initial system settings, to include:

- Desired Humidity Setpoint
- Units (Fahrenheit or Celsius)
- Remote Dehumidistat (Yes or No)


You will not need to perform this step again after the initial setup.

5. To change the desired humidity setpoint (Settings, Humidity Setpoint), simply press "Up" (if you prefer air to be less dry) or "Down" (if you prefer the air to be drier). The same screen displays on the unit and on the APP. While 40 to 60% is normally considered ideal and healthy, your comfort is the best indication of how to set your humidity level.

6. The control displays the number of hours your filter has been in place. After replacing the filter, press the "Reset Hours" button to set it to zero (Settings, Filter Hours).

IMPORTANT:

- The filter must be replaced every 6 months.
- Do NOT operate the unit without a filter.

 Turn the power OFF before replacing your filter.


7. The "Auto" fan mode simply indicates that the fan will run whenever there is a call for dehumidification.

8. When "Cycling" is selected, the unit will run the fan at intervals of 10, 20 and 30 minutes per hour. This keeps air circulating throughout the space when a call for dehumidification is not present.


9. If you have installed a remote control (dehumidistat) for the unit, you will need to select "Yes" (Settings, Remote Humidistat Installed).

10. The screen will indicate a remote control is connected. With a remote dehumidistat, you will not be able to control the dehumidifier using Wi-Fi.


4

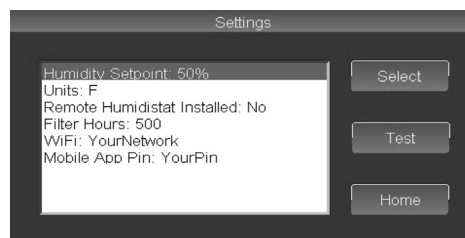


5

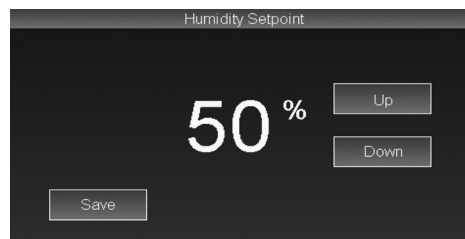


6

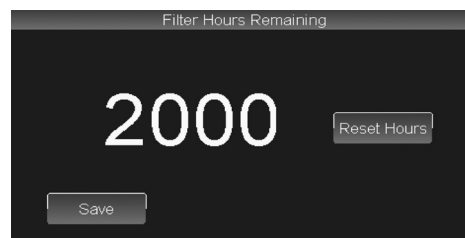

7

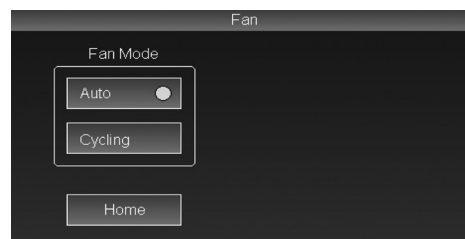


8

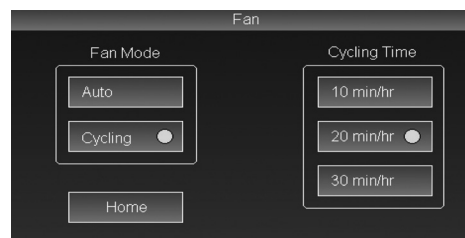

9



10

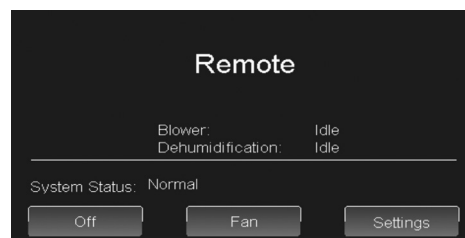

Limited Warranty

What is Covered

- Five Years: CS75 parts are warranted by General Filters, Inc. (“Company”) for a period of five (5) years from the date of the original installation, when installed in residential applications only (“Limited Warranty Period”).
- This Limited Warranty runs to the original purchaser of the Product(s) who owns, and resides in, the residential property for which it is installed and maintained.
- The Limited Warranty coverage begins upon the date the Product(s) is installed.
- This Limited Warranty is valid only for the original customer purchasing from Company, and is not transferable.

What is Not Covered

- The following components are not covered by this warranty: cabinets, cabinet pieces, air filters, driers, refrigerant, refrigerant line sets, wiring, fuses, and unit accessories.
- Installation by anyone other than a qualified contractor voids the warranty.
- This product is designed for residential installation only; therefore, commercial or industrial installations are not covered under this warranty.
- Failure to install the CS75, in accordance with these instructions, local codes, or ordinances voids the warranty.
- Modifications, changes or alterations to equipment.
- Failure to perform regular maintenance as described in this document voids the warranty.
- This Limited Warranty is valid only for the original customer purchasing from Company, and is not transferable.
- Damage caused by misuse, neglect, fire, wind, mold, damage in transit, or other casualty, contact with corrosive materials (chlorine, fluorine, salt, urine, fertilizers, recycled waste water, or other damaging substances), damage caused during installation, or any cause beyond the company's control is not covered under this Limited Warranty.
- Labor involved in diagnostic calls or in removing, repairing, servicing or replacing parts is not covered under this Limited Warranty.
- Shipping to our facility for return, repair or diagnostics.
- Use of contaminated or alternate refrigerant.
- Agreements made by third parties that are not listed in this Limited Warranty.
- Liability for special, incidental, direct, indirect, collateral and consequential damages is excluded. Some states do not allow limitation of incidental damages, so the limitations or exclusions may not apply to you. The company will not pay electricity or fuel costs, or increases in electricity or fuel costs, for any reason whatsoever, including additional or unusual use of supplemental electric heat. This warranty does not cover lodging expenses or labor charges. The company shall not be liable for any default or delay in performance under this warranty caused by any contingency beyond its control. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Limited Warranty

Limitations Of Liability

- The manufacturer makes no express warranties other than the warranty specified above.
- The implied warranties of merchantability and fitness for a particular purpose are limited to the duration listed.
- The manufacturer assumes no liability in connection with the installation or use of the product, except as stated in this Limited Warranty.
- The manufacturer will in no event be liable for incidental or consequential damages.
- This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow either limitations on implied warranties, or exclusions from incidental or consequential damages, so the above exclusion and limitation may not apply to you.

Questions

- Any questions pertaining to this limited warranty should be addressed to the manufacturer. (U.S.A.: The manufacturer has elected not to make available the informal dispute settlement mechanism which is specified in the Magnuson-Moss Warranty Act.)

To Make a Warranty Claim / Obtain Service

- The Owner must contact General Filters, Inc. to arrange for applicable Limited Warranty service, within the warranty period. Owner must also provide complete:
 - model number
 - serial number
 - proof of required periodic maintenance
 - installation date and location
 - an accurate, detailed description of the problem
- Owner shall be solely responsible for properly packaging the Covered Equipment for freight, and for all risk of loss associated with shipment.
- Owner is responsible for obtaining a licensed contractor to perform any repairs, maintenance or other work on unit.
- If during the Limited Warranty Period, Covered Equipment fails because of a manufacturing defect, Company will provide a free replacement part to the Owner through a licensed service contractor.

Warranty Registration & Product Support

Warranty/Product Support
General Filters, Inc.
43800 Grand River Ave.
Novi, MI 48375
(866) 476-5101



 **WARNING: Turn off power before performing maintenance.**

 **CAUTION: Maintenance should be performed only by a qualified contractor.**